



Interface Design Definition

FS-3DT, FarSounder-500, and FarSounder-1000 Navigation Sonar Systems

FarSounder, Inc.
151 Lavan Street
Warwick, RI 02888
United States

phone: +1 401 784 6700

info@farsounder.com
www.farsounder.com

Copyright © 2009-2016 FarSounder, Inc.

All rights reserved. This document contains confidential information that is proprietary to FarSounder, Inc. This commercially sensitive information is being provided to the recipient solely for the purpose specified and shall not be reproduced, disclosed or supplied, in whole or in part, to any other person without the prior written consent of FarSounder, Inc.

Although every precaution has been taken in the preparation of this document, FarSounder, Inc. assumes no responsibility for errors or omissions. Furthermore no liability is assumed for damages resulting from the use of information contained herein.

FarSounder, the FarSounder logo, Power Module, Transducer Module, and SonaSoft are trademarks of FarSounder, Inc.

Table of Contents

1. Definitions	2
2. Introduction	3
3. Overview of Interface	3
4. FarSounder's Coordinate System Convention	3
5. Hydrophone Data Explained	4
6. Target Data Explained	5

1. Definitions

Term	Definitions
FSS	FarSounder SonaSoft™ Software
FS-3DT	FarSounder's 3D dual transmission forward-looking sonar designed for surface ships. Operates in two modes: 90 degree field of view with a range of up to 330 meters and 60 degree field of view with a range of 440 meters. Note that this is an older model of sonar that is supported, but no longer available for sale. It has been replaced by the FarSounder-500 system.
FarSounder-500	FarSounder's 3D extended range forward-looking sonar designed for surface ships. Operates at 100, 200, and 500 meter ranges with a 90 degree field of view.
FarSounder-1000	FarSounder's 3D long range forward-looking sonar designed for surface ships. Operates at 100, 200, and 500 meter ranges with a 90 degree field of view and at 1000 meters with a 60 degree field of view.
ZMQ	ZeroMQ Library: http://zeromq.org/
Protobuf	Protocol Buffers: https://code.google.com/p/protobuf/

Table 1. Definitions

2. Introduction

This document provides an overview of the network interface to FarSounder's FS-3DT, FarSounder-500, and FarSounder-1000 Navigation Systems. The intended audience is software developers who would like to interface with FarSounder's navigation products in order to integrate its live 3D forward looking data into their system.

3. Overview of Interface

FSS uses ZMQ to send Protobuf encoded data through the network. Clients may connect to any data channels they need. FSS typically provides two types of ZMQ connections for clients:

1. *ZMQ_SUB* [<http://api.zeromq.org/3-2:zmq-socket#toc10>] for streaming data.
2. *ZMQ_REQ* [<http://api.zeromq.org/3-2:zmq-socket#toc4>] for configuring FSS via Remote Procedure Calls and/or requesting certain types of data.

All sockets operate entirely independently. A client may connect and disconnect to each socket as needed. For example, a client that is only interested in Target Data and Control information only needs to connect to the Target Data and Control data sockets. If that client later decides it also wants Hydrophone Data, it can then connect to the Hydrophone Data socket at that time.

In general, streaming data messages (*ZMQ_SUB*) will be sent at approximately .5 Hz to 2 Hz; with the exact rate depending on the sonar and system configuration in use at the time.

Please see the accompanying `.proto` files for details on the socket type and default port number for each message messages provided by FSS. In particular, `nav_api.proto` describes all the messages that are provided by FSS. The other `.proto` files describe sub-messages of the primary data types.

4. FarSounder's Coordinate System Convention

The 3-dimensional data generated by FSS conforms to FarSounder's coordinate space convention. The coordinate space's origin is the center of the Transducer Module array face as shown in figure 1. Positive Cross Range is to Port. Negative Depth is Down. Cross Range and Down Range are constant relative to the earth and do not change as the vessel rolls and pitches.

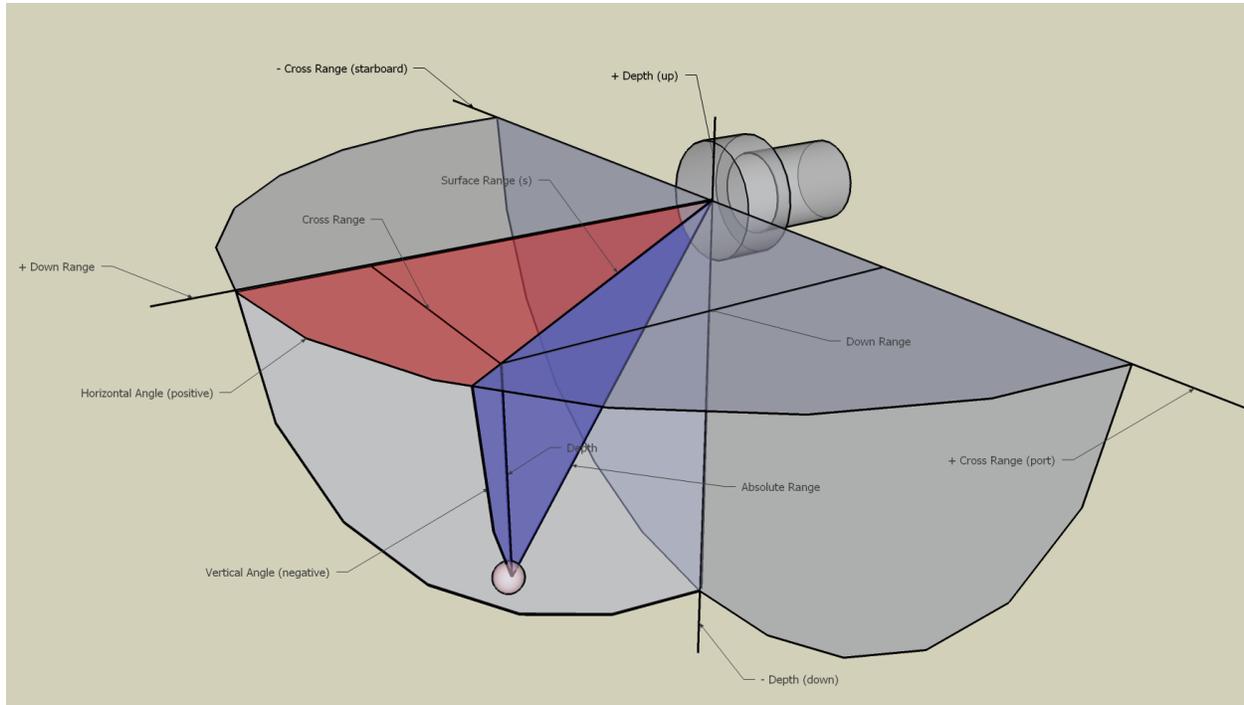


Figure 1. Coordinate System (FS-3DT/FarSounder-500/FarSounder-1000 Sonar)

5. Hydrophone Data Explained

Hydrophone Data is the filtered receiver signal produced by a sonar's Transducer Module. As each receiver is generally comprised of multiple receiver elements arranged into a receiver array, hydrophone data includes the raw signals for all the elements in the array. This data is produced every time the sonar completes a transmit/receive cycle.

FarSounder's user interface display uses hydrophone data in its status viewer. This data type is included so that 3rd party systems can replicate a similar display if desired. This display is used for troubleshooting and checking that the system is transmitting and/or receiving. The FarSounder display shows a "checker board" indicating the geometric layout of the receiver array. Each square in the "checker board" represents a single receiver element. The color of each square is related to total energy received by that receiver. This lets the user quickly see if a single channel is not operating well. The FarSounder display also allows a user to select a specific channel and display the timeseries of that single channel in an O-scope like display.

Figure 2 shows the Status Viewer from FSS. In the center panel, labeled "Hydrophone Data", is a channel of hydrophone data (shown on the left), as well as a depiction of the relative intensity of each individual hydrophone (shown on the right). Note that the hydrophone intensities on the right hand side are arranged into a grid sized [number of Horizontal hydrophone elements] by [number of vertical hydrophone elements].

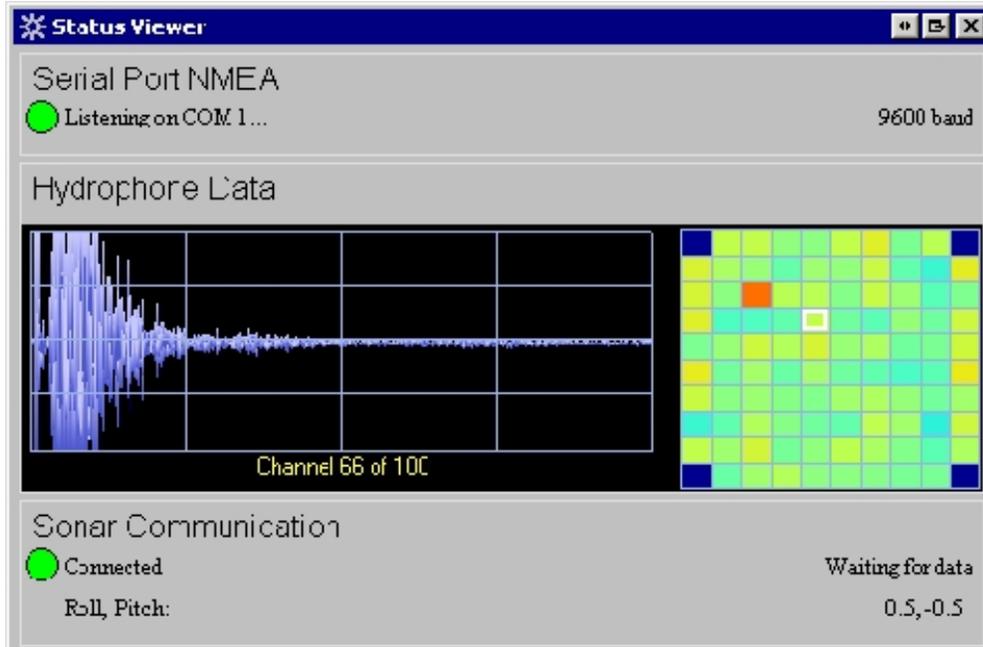


Figure 2. SonaSoft's Hydrophone Data Display

6. Target Data Explained

Target Data is the 3 dimensional data processed from the sonar. The data is split into two primary groups: bottom (sea floor) detections and in-water detections. In FarSounder's display software, the "bottom" is drawn as a smoothed surface. It is generally limited to about 8 times the depth of water below the Transducer Module (see FarSounder's tech blog article "Explaining the Water Depth Limit and Other Unexpected Reflections" [http://www.farsounder.com/technology/blog/water_depth_limit] for more information). The bottom image can be drawing with color mapped to depth or color mapped to signal strength. This is 3D information and be displayed in a top down orthographic projection or as a 3D surface with perspective. In-water targets are drawn separate from the sea floor. When these targets are located beyond the water depth limit of the sonar, their depth information is not reliable.

6.1. FarSounder Display Example

Figure 3 shows an example of the 3D sonar display from FSS. It is generated from target data. In this picture, the sea floor is drawn as a smooth surface from the target data's bottom bins. The in-water targets are drawn with a simple sphere representing each in-water target data location. Additional examples of FarSounder's display can be found in FarSounder's screen shots gallery [<http://www.farsounder.com/multimedia/screenshots>].

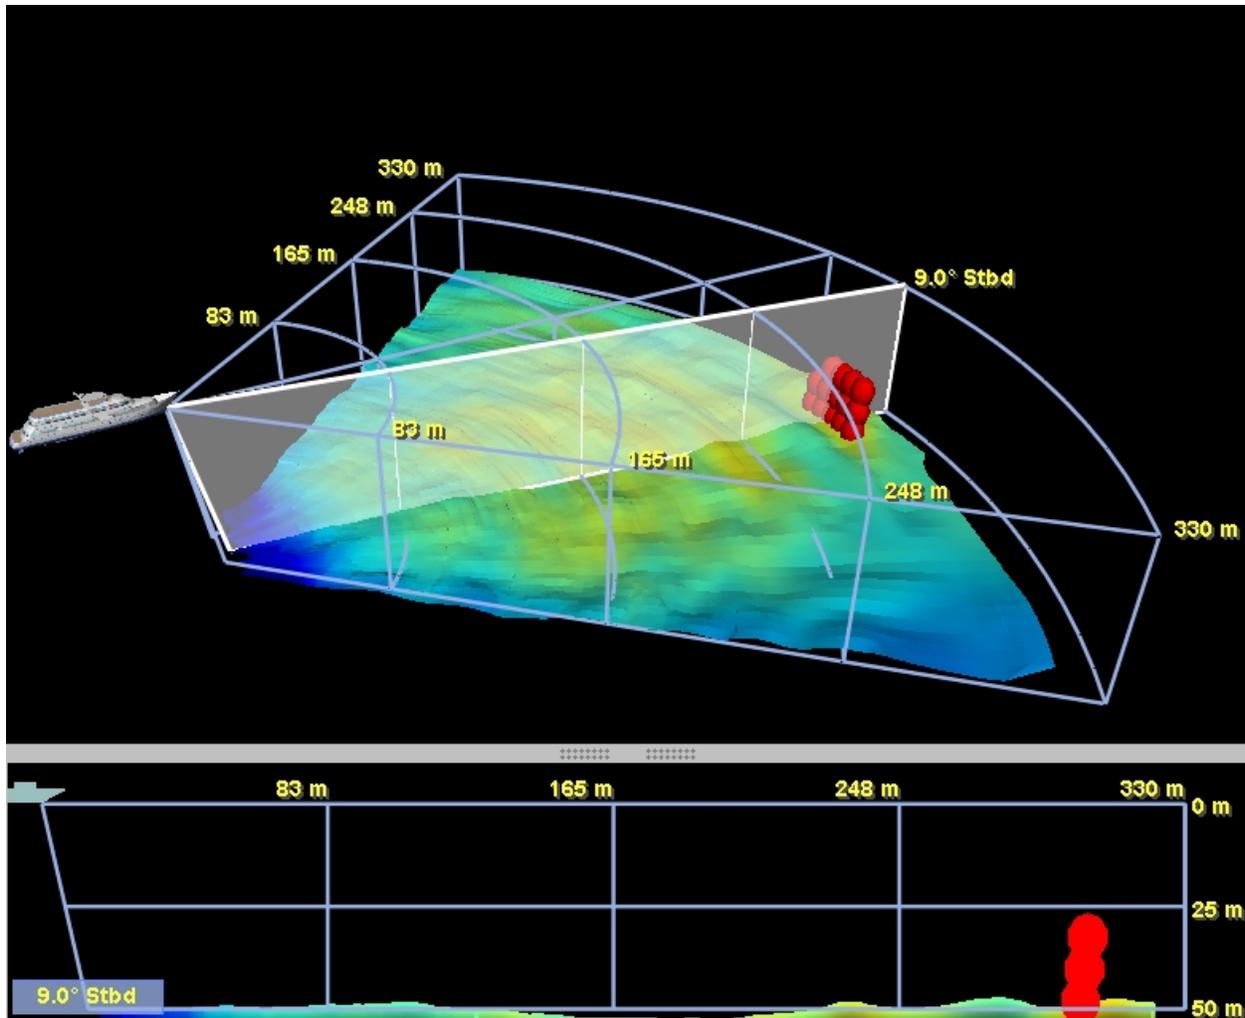


Figure 3. SonaSoft's 3D Sonar Viewer

6.2. Sea Floor Drawing Example

The sea floor data which may be included with each target data consists of multiple bottom bins. Each bin represents a single point that has been detected as part of the sea floor by FarSounder's sonar processing. Each bin includes information about the particular angle and range indices on which it was detected. Each bin also includes the (x,y,z) location of the bin relative to the sonar. The bottom points provided by the bins can be expected to be ordered by increasing range index along each angle index.

There are a variety of methods for drawing a surface from a series of sparse points. FSS uses a relatively simple method of generating the 3D surface.

The drawing algorithm first expands the bottom points for every range index along each horizontal angle index. Since the angle and range indices are included in the bins, the drawing algorithm can easily determine the range extents of the bottom bins along each horizontal angle. The algorithm then simply draws triangles between points along two consecutive angle indices as illustrated in Figure 4.

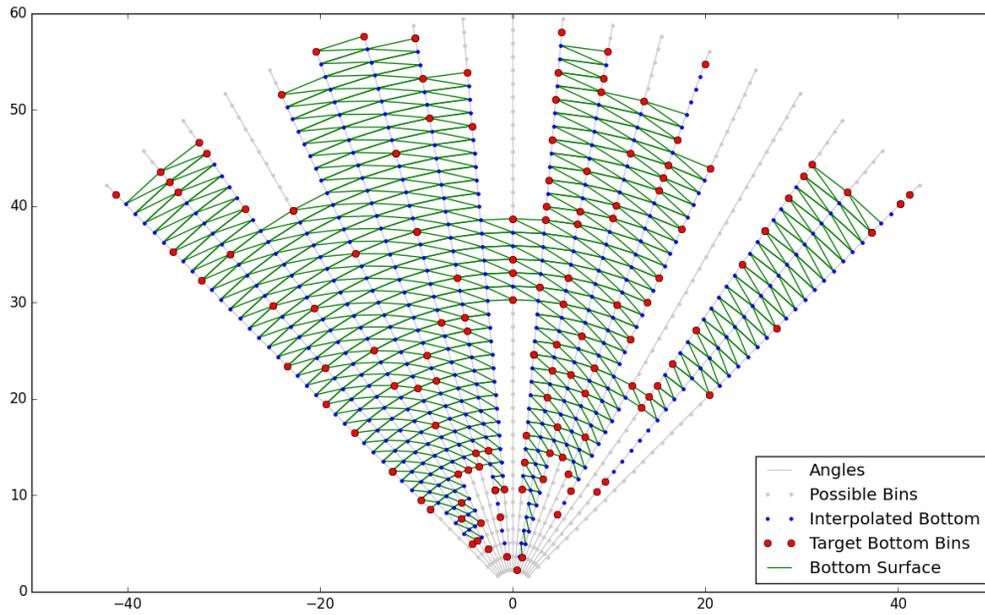


Figure 4. Simple bottom drawing example